

**Table 3-1
Tuning Charts**

Each amplifier is supplied with a special Tuning Chart, filled out during the Final Test and Quality Control. This Chart gives PLATE and LOAD settings for actual operation of your amplifier into a 50 ohm load, using popular mid-band frequencies on each Amateur band. These settings will vary according to your favorite operating frequencies. **USE THESE PLATE AND LOAD SETTINGS AS A GUIDE WHEN TUNING YOUR NEW AMPLIFIER FOR THE FIRST TIME, ACCORDING TO THE TUNING PROCEDURE ON PAGE 16.**

No-Tune Models have been pre-tuned at the factory for mid phone-band frequencies. The FINE control is used to peak amplifier tuning on other portions of each band. See Step 17 in Tuning Procedure.

CAUTION

OBSERVE CURRENT LIMITATIONS FOR NORMAL OPERATION

	LK450	LK500	LK550
Plate Voltage	3150	3150	3150
Plate Current, mA	550	950	1400
Grid Current, mA	150	300	400